


CARTA DE SALIDA NORMALIZADA
VUELO POR INSTRUMENTOS (SID)-OACI



TA 6000
VAR 0° (2020)

APP 118.730 C
278.025 MHz
TWR 122.105 C
386.675 MHz

ALBACETE
RWY 09 **RWY 27**
SOSAV3B SOSAV3A

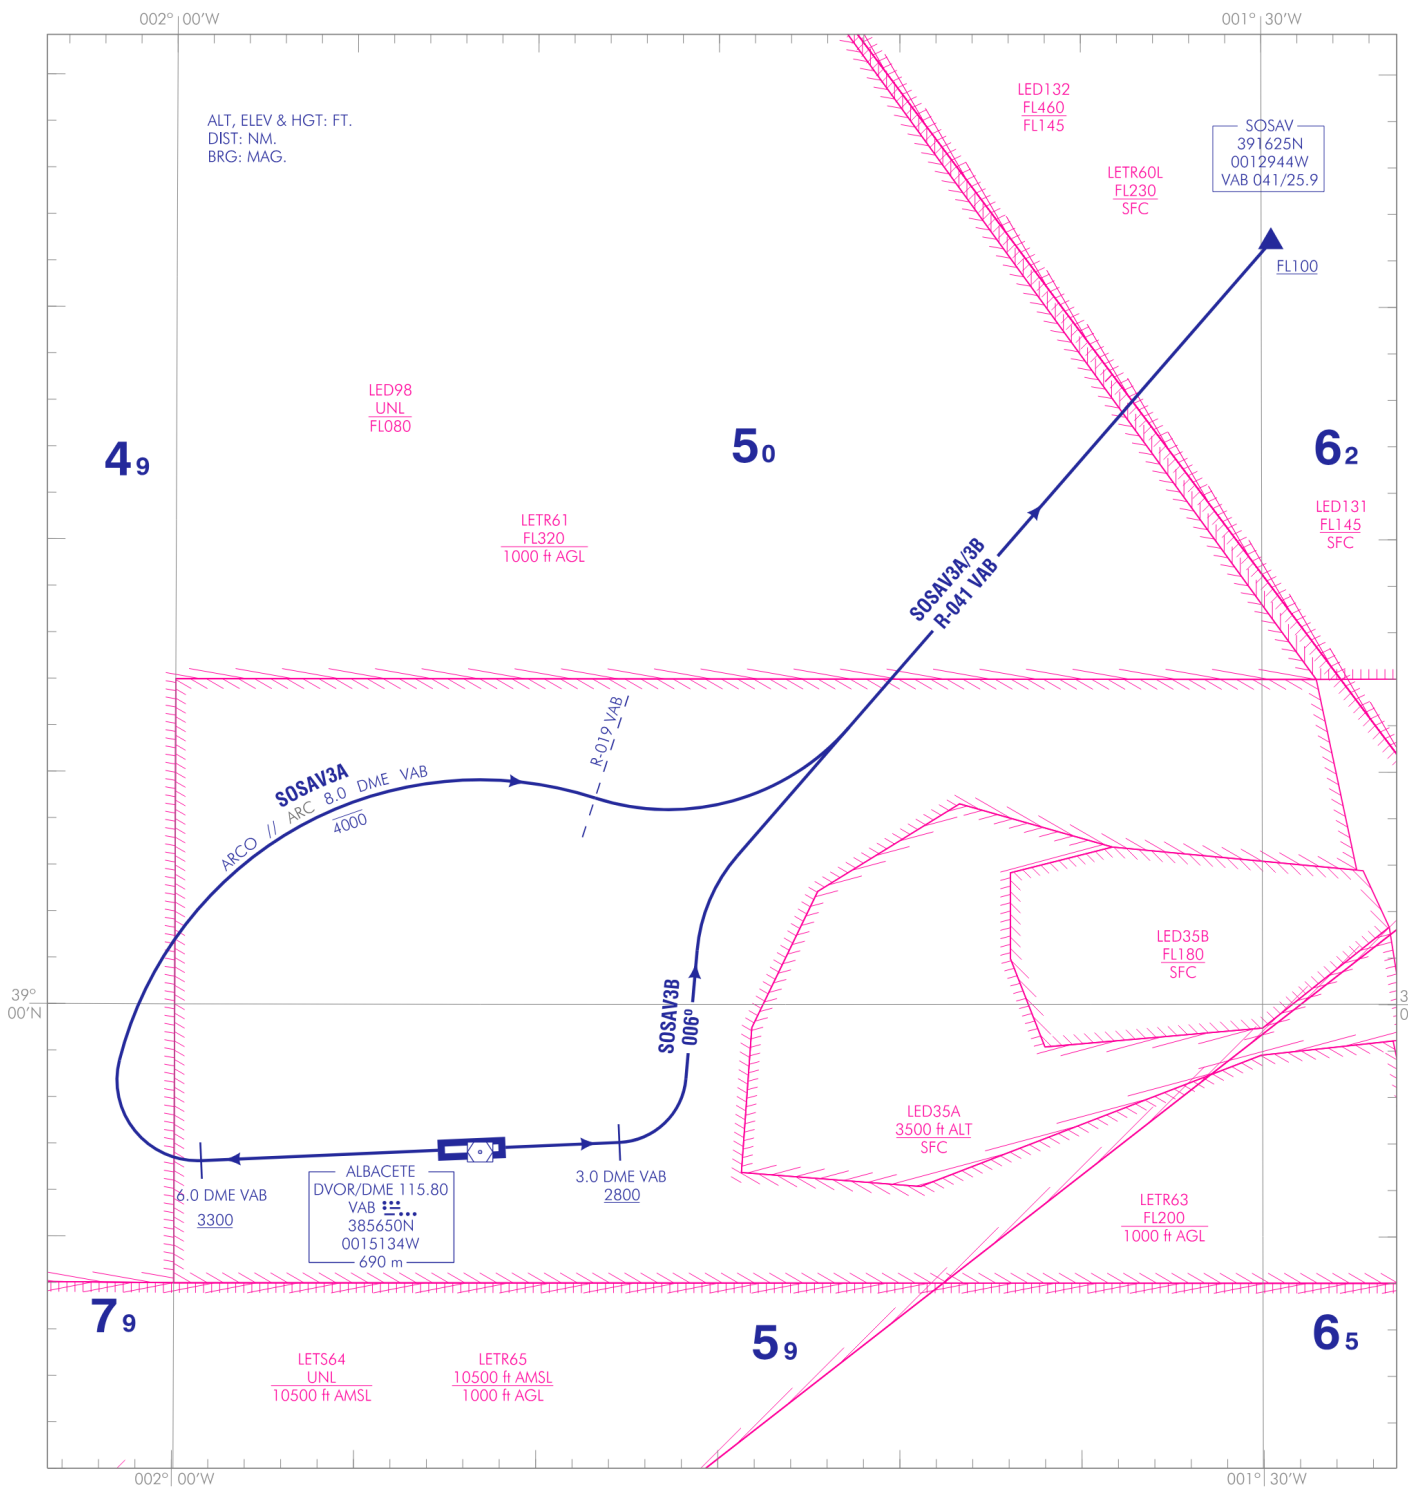

CAMBIO: FRECUENCIAS.
CHANGES: FREQUENCIES.

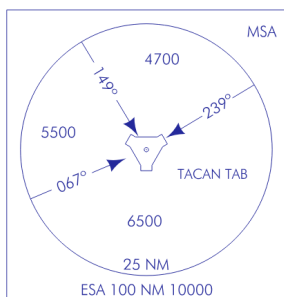

STANDARD INSTRUMENT DEPARTURES (SID)

RUNWAY 09

SOSAVTHREE BRAVO DEPARTURE (SOSAV3B)

Climb on runway heading direct to cross 3.0 DME VAB at 2800 ft or above. Turn left magnetic heading 006° to intercept and follow R-041 VAB direct to cross SOSAV at FL100 or above.

Minimum climb gradient of 5.0% up to SOSAV.

RUNWAY 27

SOSAVTHREE ALPHA DEPARTURE (SOSAV3A)

Climb on runway heading to cross 6.0 DME VAB at 3300 ft or above. Turn right to intercept and follow arc 8.0 DME VAB (MAX ALT 4000 ft) to R-041 VAB and climb. Turn left and follow R-041 VAB direct to cross SOSAV at FL100 or above.