

LEXJ AD 2 AERODROME DATA

LEXJ AD 2.1 AERODROME LOCATION INDICATOR AND NAME

LEXJ - SANTANDER/Seve Ballesteros-Santander

LEXJ AD 2.2 AERODROME GEOGRAPHICAL AND ADMINISTRATIVE DATA

1	ARP	432537N 0034912W. See AD 2-LEXJ ADC.
2	Distance and direction from the city	4 km S.
3	Elevation	5 m / 16 ft.
4	Geoid undulation	50.12 m ± 0.05 m (1).
5	Reference temperature	24°C.
6	Low average temperature	9°C.
7	Magnetic variation	0° (2025).
8	Annual change	10'E.
9	AD administration	Aena.
10	Address	Aeropuerto de SANTANDER/Seve Ballesteros-Santander; 39600 Maliaño (Cantabria).
11	TEL	+34-942 202 113/111
12	FAX	+34-942 202 153
13	AFTN	LEXJ
14	E-mail	ceopssdr@aena.es
15	Approved traffic	IFR/VFR. (2)
16	Remarks	Payment of airport fees shall be accomplished by electronic means (payment card or virtual TPV) or by the exact sum in cash (maximum amount of 1000 euros). (1) For all AD points. (2) General and Business Aviation: PPR requests shall be submitted through the SAGA Portal (https://saga.aena.es/) as specified in item 20, Local Regulations – General and Business Aviation.

LEXJ AD 2.3 OPERATIONAL HOURS

1	Airport	V: 0430-2100, PS 2 HR PPR. I: 0530-2200, PS 2 HR PPR.
2	Customs and Immigration	HR AD. (1)
3	Health and Sanitation	See GEN 1.4.
4	AIS/ARO	H24. (2)
5	MET briefing	V: 0330-2100, PS 2HR PPR. I: 0430-2200, PS 2HR PPR.

6	ATS	V: 0415-2120, I: 0515-2220. In case PPR is activated: V: 0415-2320, I: 0515-0020.
7	Fuelling	HR AD.
8	Handling	HR AD.
9	Security	H24.
10	De-icing	Yes. See item 4.5.
11	Remarks	Airport hours of activity: V: 0415-2120, I: 0515-2220. In case PPR is activated: V: 0415-2320, I: 0515-0020. (1) Except for scheduled commercial flights and before submitting the flight plan, the operation must be communicated 1 HR in advance to the Airport Operations Centre (CEOPS): • TEL: +34-942 202 111/113 • FAX: +34-942 202 153 • AFTN: LEXJ • E-mail: ceopssdr@aena.es (2) Centralised AIO Office - International NOTAM Office • TEL: +34-913 213 137/138 • E-mail: unof@enaire.es Centralised ARO office geographical area 1 • TEL: +34-918 603 556 and +34-672 344 412 (only for communications contingency) • E-mail: arocentralizada@enaire.es • AFTN Address for Flight Plan management LEXJ: LEXJZPX

LEXJ AD 2.4 HANDLING SERVICES AND FACILITIES

1	Cargo facilities	Yes.
2	Fuel types	100LL, JET A-1.
3	Oil types	AEROSHELL W100.
4	Refuelling capacity	100LL: • 1 truck 1500 L, 0.83 L/s. • 1 tank 30000 L, 6.6 L/s. JET A-1: • 2 trucks 28000 L, 20 L/s. • 3 tanks 25000 L, 18.3 L/s.
5	De-icing facilities	Hot water and glicol for removing ice from the ACFT in stand. Service provided by handling agent.
6	Hangar space	No.
7	Repair facilities	No.

8	Remarks	Request for fuel supply: EXOLUM • TEL: +34-942 253 414 • TEL: +34-629 086 774 • E-mail: jjbustamantec@exolum.com; sdr@exolum.com Commercial Aviation and General Aviation handling agent: • SOUTH EUROPE GROUND SERVICES SL. Handling with regulated tariff for basic and complementary ramp services. • TEL: +34-942 202 176/139; +34-629 229 001 • FAX: +34-942 202 115; +34-942 254 743 • E-mail: sdrkt@southeu.com; sdrkk@southeu.com • SITA: SDRKQIB/SDRKTIB General Aviation handling agent: • UNITED AVIATION SERVICES S.L. Only for general aviation, aerial works or non-scheduled commercial transport with aircraft with a maximum take-off weight (MTOW) of less than 10 tonnes or with fewer than 20 seats. • TEL: +34-609 549 317; +34-609 549 436 • E-mail: ops.sdr@unitedaviation.es • E-mail: alberto.zaballos@unitedaviation.es
---	---------	--

LEXJ AD 2.5 PASSENGER FACILITIES

1	Hotels	No.
2	Restaurant	Yes.
3	Transportation	Bus, taxis and hire cars.
4	Medical facilities	No.
5	Bank/Post Office	Banking machine/Mail box.
6	Tourist information	Yes.
7	Remarks	None.

LEXJ AD 2.6 RESCUE AND FIREFIGHTING SERVICES

1	Fire category	7. (1)
2	Rescue equipment	In accordance with the fire category published.
3	Removal of disabled aircraft	Own equipment for removing disabled aircraft up to 2 TM. For heavier aircraft, external service subject to presence and at the expense of the aircraft owner/operator. (2)
4	Remarks	(1) The response time of the rescue and fire fighting service is less than 3 minutes, with an operational objective of less than 2 minutes. Fire category 8 on demand, according to PROCEDURE FOR OPERATION OF AIRCRAFT EXCEEDING THE CERTIFIED AERODROME CHARACTERISTICS (see item 20). (2) Responsible for coordinating the removal operation for disabled aircraft: CEOPS (Airport Operations Centre). The contact data appear in item 2.

LEXJ AD 2.7 RUNWAY SURFACE CONDITION ASSESSMENT AND REPORTING, AND SNOW

PLAN

1	Types of clearing equipment	Urea spreader, snowplough.
2	Clearance priorities	Runway, runway access taxiway Y2, apron access B, parking apron access taxiway B and stands 01 to 04.
3	Use of material for movement area surface treatment	Urea (UREA).
4	Specially prepared winter runways	Not applicable.
5	Remarks	Period of application of snow plan: 01-DEC to 31-MAR. Runway surface condition assessment and reporting in accordance with the Global Reporting Format (GRF) methodology described in AD 1.2.2. Aerodrome in service during all seasons of the year.

LEXJ AD 2.8 APRONS, TAXIWAYS AND CHECK LOCATIONS/POSITIONS DATA

1	Apron	Surface: Concrete. EXC PRKG 23: Asphaltic concrete. Strength: PRKG FM 1 TO 8: PCN 63/R/B/W/T. PRKG FM 9 TO 13: PCN 79/R/B/W/T. PRKG FM 14 TO 24: PCN 136/R/B/W/T.
2	Taxiways	Width: 23 m. Surface: Asphalt. Strength: PCN 102/F/A/W/T.
3	Check locations	Altimeter: Apron ELEV 3 m / 10 ft. VOR: No. INS: See AD 2-LEXJ PDC.
4	Remarks	None.

LEXJ AD 2.9 SURFACE MOVEMENT GUIDANCE AND CONTROL SYSTEM AND MARKINGS

1	Taxiing guidance system	Runway-holding positions, runway guard lights, intermediate holding positions, stop bars, LGTD boards and stands.
2	RWY markings	Designators, threshold, turning bay, centre line, side stripe, aiming point, touchdown zone.
3	TWY markings	Centre line, edge.
4	Remarks	None.

LEXJ AD 2.10 AERODROME OBSTACLES

1	Obstacles in Approach, Take-Off Climb, Conical, Inner Horizontal, Transitional, Inner Transitional and Balked Landing Surfaces established in ICAO Annex 14; and the areas 2A and 3 established in ICAO Annex 15. Those penetrating these surfaces are identified in the CSV file as "Relevante_Relevant = Si/Yes".	See Item 10 and Data Set.
2	Remarks	See AD 2-LEXJ AOC.


LEXJ AD 2.11 METEOROLOGICAL INFORMATION PROVIDED

1	MET office	Santander EMAe.
2	HR	V: 0330-2100, PS 2HR PPR. I: 0430-2200, PS 2HR PPR. Outside these hours, a half-hourly METAR AUTO will be issued.
3	METAR	Half-hourly.
4	TAF	24 HR.
5	TREND	No.
6	Briefing	In person and by telephone.
7	Flight documentation/Language	Charts and plain language/Spanish.
8	Charts	Forecasted significant and wind and temperature in altitude map.
9	Supplementary equipment	Cloud, lightning image and radar information display.
10	ATS unit served	TWR.
11	Additional information	Santander OMAe (LESD): H24 - TEL: +34-942 392 464 Santander EMAe: HR AD - TEL: +34-942 202 114
12	Remarks	Aerodrome climatological summary available. Aerodrome warnings available. There is a meteorological station sited at 4329N 00348W. Which launches observation balloons twice daily, between 1115 and 1130 and between 2315 and 2330. See ENR 5.3.

LEXJ AD 2.12 RUNWAY PHYSICAL CHARACTERISTICS

RWY	Direction	DIM (m)	THR PSN	THR ELEV TDZ ELEV	SWY (m)	CWY (m)	Strip (m)	OFZ	RESA (m)	RWY/SWY SFC PCN
11	110.12° GEO 110° MAG	2320 x 45	432550.8436N 0035002.1062W	THR: 3.4 m / 11 ft TDZ: No	No	60 x 150	2440 x 300	No	90 x 90	RWY: ASPH (1) PCN 115/F/A/W/T SWY: No
29	290.15° GEO 290° MAG	2320 x 45	432524.9536N 0034825.2462W	THR: 3.7 m / 12 ft TDZ: 4.8 m / 16 ft	No	60 x 150	2440 x 300	No	90 x 90	RWY: ASPH (2) PCN 115/F/A/W/T SWY: No
Remarks: (1) Concrete first 200 m of RWY 11. PCN 71/R/C/W/T. (2) Concrete first 120 m of RWY 29. PCN 71/R/C/W/T.										

12.1 PROFILE

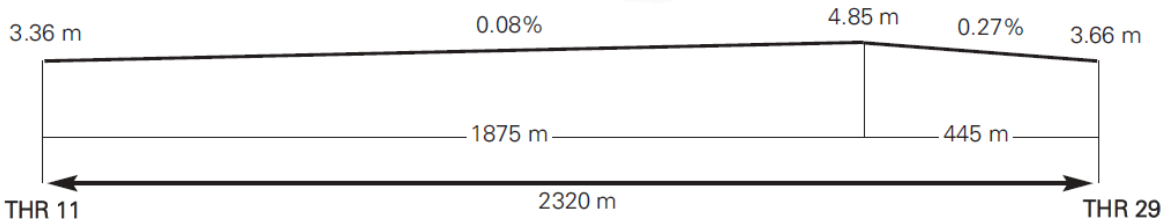

LEXJ AD 2.13 DECLARED DISTANCES

RWY	TORA (m)	TODA (m)	ASDA (m)	LDA (m)
11	2320	2380	2320	2320
29	2320	2380	2320	2320
11 INTY2 (1)	1312	1372	1312	-
11 INTY3	1943	2003	1943	-
29 INTY1	1833	1893	1833	-
29 INTY2 (1)	1030	1090	1030	-
Remarks: (1) Helicopters exclusive use only.				

LEXJ AD 2.14 APPROACH AND RUNWAY LIGHTING

1	Runway	11
2	Approach	Threshold identification lights. LIH
3	PAPI (MEHT)	3° (16.38 m/54 ft).
4	Threshold	Green, with wing bars.
5	Touchdown zone	No.
6	Runway centreline	2320 m: 1420 m white + 600 m white and red + 300 m red. LIH. Regulable luminosity. Distance between lights: 15 m.
7	Runway edge	2320 m: 1720 m white + 600 m yellow. Regulable luminosity. LIH. Distance between lights: 50 m.
8	Runway end	Red.
9	Stopway	No.
10	Remarks	Turning pad centreline: 43 green markers. Turning pad edge: LED lighting.

1	Runway	29
2	Approach	Precision CAT I, 300 m. (1) Threshold identification lights. LIH.
3	PAPI (MEHT)	3° (16.51 m/54 ft).
4	Threshold	Green, with wing bars.
5	Touchdown zone	No.
6	Runway centreline	2320 m: 1420 m white + 600 m white and red + 300 m red. LIH. Regulable luminosity. Distance between lights: 15 m.
7	Runway edge	2320 m: 1720 m white + 600 m yellow. Regulable luminosity. LIH. Distance between lights: 50 m.

8	Runway end	Red.
9	Stopway	No.
10	Remarks	Turning pad centreline: 39 green markers. Turning pad edge: LED lighting. (1) LED lighting.

LEXJ AD 2.15 OTHER LIGHTING, SECONDARY POWER SUPPLY

1	ABN/IBN	No.
2	WDI	1 near THR 11, 1 near THR 29, 1 near apron. LGTD.
3	TWY lighting	Edge and centreline.
4	Apron lighting	Edge (1), 4 floodlighting poles. LIH (2).
5	Secondary power supply	The maximum switch-over (light) time is 1 second for the runway centre line, runway edge, threshold, runway end and stop bars. For the remaining visual aids systems, the maximum switch-over (light) time established is 15 seconds.
6	Remarks	(1) LED lighting. (2) Partial LED lighting (50%).

LEXJ AD 2.16 HELICOPTER LANDING AREA

1	Position	FATO: RWY 11/29. Coordinates THR 11 and THR 29, see item 12. Ground taxiing: TLOF same as RWY 11/29. Coordinates: 432537N 0034912W (same as ARP). Air taxiing: TLOF same as PRKG 23 and 24.
2	Elevation	FATO: RWY 11/29. Elevation THR 11 and THR 29, see item 12. Ground taxiing: TLOF same as RWY 11/29. Elevation: 5 m. Air taxiing: TLOF same as PRKG • 23 (elevation 3.82 m) and • 24 (elevation 2.94 m).
3	Dimensions, surface, maximum weight, marking	FATO: RWY 11/29. Ground taxiing: TLOF same as RWY 11/29, see item 12. Air taxiing: TLOF same as PRKG • 23: Asphaltic concrete PCN 136/R/B/W/T and • 24: Concrete PCN 136/R/B/W/T. Circular strip 30 cm wide with inner diameter of 17.85 m.
4	Directions	No.
5	Declared distances	Yes. See AD 2-LEXJ item 20, HELICOPTER OPERATIONS.
6	Lighting	No.
7	Remarks	Air taxiing: Maximum speed: 37 km/h. Lighting for TWY D-2, and PRKG 23 and 24: No.

LEXJ AD 2.17 AIR TRAFFIC SERVICES AIRSPACE

1	Designation	CTR SANTANDER.
2	Lateral limits	433128N 0040036W; 432913N 0034546W; 432833N 0034316W; 433025N 0033707W; 432457N 0033224W; 431823N 0033522W; 432646N 0040256W; 433128N 0040036W.
3	Vertical limits	SFC - 1000 ft AGL.
4	Airspace class	D.
5	Unit Language	SANTANDER TWR. ES/EN.
6	Transition altitude	1850 m/6000 ft.
7	Hours of applicability	-
8	Remarks	-

1	Designation	ATZ SANTANDER.
2	Lateral limits	Circle radius 8 km centred on ARP. (1)
3	Vertical limits	SFC - 3000 ft HGT (2).
4	Airspace class	D.
5	Unit Language	SANTANDER TWR. ES/EN.
6	Transition altitude	-
7	Hours of applicability	-
8	Remarks	(1) Or the ground visibility, whichever is lower. (2) Or up to the cloud ceiling, whichever is lower.

LEXJ AD 2.18 AIR TRAFFIC SERVICES COMMUNICATION FACILITIES

Service	Call sign	FREQ	HR	Remarks
APP	Santander TWR	118.375 MHz	HR ATS	APP/I
TWR	Santander TWR	118.105 C	HR ATS	-
		121.500 MHz	HR ATS	EMERG
		121.705 C	HR ATS	GMC
		257.800 MHz	HR ATS	MIL
ATIS	Santander Information	127.530 C	HR ATS	-
D-ATIS	Santander Information	NIL	HR ATS	Provision of ATIS information via data link.

LEXJ AD 2.19 RADIO NAVIGATION AND LANDING AIDS

Facility (VAR)	ID	FREQ	HR	Coordinates	DME ELEV	Remarks
DVOR (0°W)	SNR	115.300 MHz	H24	432659.2N 0035408.7W	-	COV 40 NM U/S BTN: - R-090/R-200 FL080 or BLW; - R-200/R-280 FL095 or BLW; - R-280/R-090 4000 ft MSL or BLW. COV 10 NM: - BTN R-320/R-340 possible oscillations of more than ± 2° BLW 5000 ft AMSL; - R-356 BTN 26 & 28 NM DME possible signal oscillations at FL080; - R-275 COV FL100 38 NM overlap with VES; - R-290 possible signal loss BTN 2 & 1 NM.
DME	SNR	CH 100X	H24	432659.7N 0035408.3W	60 m	COV 40 NM U/S BTN: - R-090/R-200 FL080 or BLW; - R-200/R-280 FL095 or BLW; - R-280/R-090 4000 ft MSL or BLW. R-275 COV FL080 26.4 NM (RONSI), FL100 38 NM overlap with VES.
NDB (0°W)	SA	416.000 kHz	H24	432606.2N 0035059.6W	-	COV 25 NM: Possible signal fluctuations BTN 119°/159° & 219°/249°.
LOC 29 (0°W) ILS CAT I	STA	110.900 MHz	H24	432553.0N 0035010.2W	-	290° MAG / 193 m FM THR 11. COV 17 NM AVBL BTN 20° to the left and 35° to the right of RCL to 5100 ft AMSL or ABV. COV 25 NM AVBL BTN +-10° of RCL to 5100 ft AMSL or ABV.
GP 29	-	330.800 MHz	H24	432532.3N 0034836.7W	-	3°; RDH 17.7 m; at 320 m FM THR 29 & 125 m FM RCL to the right in direction APCH. Full fly-up indications may not be received BLW GP to the right of RCL.
ILS/DME 29	STA	CH 46X	H24	432532.3N 0034836.7W	9 m	REF DME THR 29.

LEXJ AD 2.20 LOCAL AERODROME REGULATIONS

AD closed to aircraft without two-way radio communication.

20.1 ATC PROCEDURES

20.1.1 MINIMUM RUNWAY OCCUPANCY TIME

Given that the taxiway parallel to the runway does not reach the thresholds, it is usually necessary to taxi along the runway. In this case, the following shall be taken into account:

A. DEPARTURES

Aircraft should be ready to initiate take-off immediately after alignment with the corresponding runway centre line. Pilots unable to comply with this requirement shall notify ATC before reaching the runway-holding positions at Y-1, Y-2 or T-3.

B. ARRIVALS

Commensurate with aircraft safety and standard operation, pilots are reminded that rapid exit from the runway enables maximum runway utilization and lessens its occupancy time.

20.1.2 TAKE-OFF FROM INTERSECTION

Aircraft requesting this procedure shall notify it, preferably, when requesting clearance to start-up.

20.2 STANDARD TAXIING PROCEDURES

20.2.1 TAXIING MANOEUVRES

- Pilots shall request clearance from ATC to start-up engines/turbines on the appropriate frequency. When this clearance is requested, the aircraft must be ready to start up immediately, or expected to be ready to do so within a maximum period of 5 minutes.
- All the stands are autonomous. Exits from these stands shall be carried out using the minimum start-up engine power and in such a way that, when making the turn, this is not higher than idling.

20.2.2 TAXIING RESTRICTIONS

Simultaneous use of the runway and the taxiway parallel to the runway are incompatible when one of them is being used by a type E aircraft.

20.2.3 GROUND MOVEMENT

Crossing the apron taxiways on foot is forbidden except when the aircraft does not have a ground handling agent, and shall be accomplished using the apron service roads, wearing high-visibility clothing, and with clearance from the movement area supervision service.

All surface movements of aircraft, towed aircraft, persons and vehicles in the manoeuvring area are subject to prior ATC clearance.

All movements of aircraft, towed aircraft, persons and vehicles on the apron shall be regulated by the Apron Safety Regulations.

Avoidance of collisions with other aircraft or obstacles is the responsibility of:

1. Pilots, when taxiing on the apron.
2. Ground handling companies during parking stand exit manoeuvres with push-back, and during towing.

20.2.3.1 RWY 29 IN USE

DEPARTURES

Aircraft shall exit the apron at GATE A, except:

- In cases where, for operational reasons, the exit via GATE B is coordinated with the inspection service in the manoeuvring area (access road to apron parking is occupied by an aircraft that poses an obstacle to the entry manoeuvre, assigned parking, aircraft type, etc.).

Aircraft shall generally taxi on TWYT1 and Y1.

ARRIVALS

Aircraft shall exit via TWYY2 or Y3 or Y4.

Aircraft shall enter the apron via GATE B, except in cases where, for operational reasons, entry via GATE A is coordinated with the inspection service in the manoeuvring area (access road to apron parking is occupied by an aircraft that poses an obstacle to the entry manoeuvre, assigned parking, aircraft type, etc.).

20.2.3.2 RWY 11 IN USE

DEPARTURES

Aircraft shall depart the apron at GATE B, except:

- In cases where, for operational reasons, exit via GATE A is coordinated with the inspection service in the manoeuvring area (access road to apron parking is occupied by an aircraft that poses an obstacle to the entry manoeuvre, assigned parking, aircraft type, etc.).

Aircraft shall generally taxi on TWYT3 and Y4 or Y3.

ARRIVALS

Arriving aircraft shall exit via TWYY2 or Y1.

Aircraft shall enter the apron via GATE A, except in cases where, for operational reasons, entry via GATE B is coordinated with the inspection service in the manoeuvring area (access road to apron parking is occupied by an aircraft that poses an obstacle to the entry manoeuvre, assigned parking, aircraft type, etc.).

For helicopter operations, consult item 20. LOCAL REGULATIONS - HELICOPTER OPERATIONS.

For operations of higher code letter aircraft, consult item 20. LOCAL REGULATIONS - OPERATING PROCEDURE FOR HIGHER CODE LETTER AIRCRAFT (D and E: A330-200)

20.3 GENERAL AND BUSINESS AVIATION

20.3.1 GENERAL

Training and schools operations (landings, touch-and-go, approach manoeuvres, low passes, etc.) shall be subject to the operational capacity, with priority given to scheduled commercial traffic at the airport.

The charges published by AENA under section 2.1.5 *Training and schools* of the applicable airport charges schedule shall apply to all operations including approach, low passes or touch-and-go manoeuvres.

All General and Business Aviation traffic (IFR/VFR) shall obtain PPR through the SAGA Portal (<https://saga.aena.es/>), except for training, State, military, SAR, emergency flights and aircraft based at the airport.

Where approval is granted, this shall be indicated in Item 18 of the FPL under the indicator RMK/, together with the handling agent contracted for the operation. Operations requiring prior approval which do not hold an approved slot shall be denied.

20.3.2 GROUND HANDLING

In accordance with the provisions set out in paragraph 1.3.1.6 of AD 1.1 of AIP Spain, it is mandatory to contract ground handling services for all operations, including non-commercial flights, whose passengers and/or crew members require access the terminal building.

The minimum services to be contracted are as follows:

- Complementary ramp service for the transport of passengers and/or crew members between the aircraft and the terminal building.
- Additionally, if the operation originates from or is destined to a non-Schengen airport, category 2, passenger handling services, must be contracted to escort passengers to the passport control areas in the terminal building.

See item 4.8 for contact information of the airport ground handling agents. It is recommended that handling services be contracted at least 24 HR prior to the scheduled arrival or departure of the flight. A prior request by e-mail shall be submitted, indicating the date and time of arrival and departure, aircraft registration, aircraft type and MTOW. The contracted handling agent shall be indicated in Item 18 of the FPL under the indicator RMK/.

Exemptions from this requirement:

- State, military, SAR and/or emergency flights.
- Users with aircraft based at LEXJ who hold airport accreditation.
- Users holding a valid General Aviation Pilot Card: Users possessing the General Aviation Pilot Card, must inform the airport in advance that they hold such a card. This information shall be included in Item 18 of the flight plan, under the indicator RMK/.

IMPORTANT: This exemption shall not apply when the flight originates from or is destined for a non-Schengen airport, or when the flight originates from an aerodrome where security measures at departure are not applied as provided for in Regulation (EU) No 300/2008 throughout the entire operational hours. In such cases, the contracting of handling services shall be mandatory.

For arriving operations, passengers and crew members shall remain on board the aircraft until the arrival of their ground handling agent. They may not leave the parking stand until the handling agent has arrived. For this reason, operators are advised to contact the handling agent in advance to coordinate the arrival.

For departing flights, they shall contact their ground handling agent for transfer to the aircraft.

20.4 PARKING ON GENERAL AVIATION APRON (PRKG 14 - 22)

Aircraft parked in the General Aviation Zone (PRKG 14-22) must be chocked and secured to the anchor points. Therefore, general

aviation operators must possess chocks and fittings to secure their aircraft to the anchor points provided in each stand.

20.5 HELICOPTER OPERATIONS

This item defines, exclusively, operation by helicopters with parking position allocated on the apron in SANTANDER/Seve Ballesteros-Santander AD and which do not hold a letter of exemption under the terms prescribed in RD. 552/2014, Articles 24 to 31, and Article 4 of Reglamento del Aire (SERA).

As not be defined other specific area to operate with helicopters, they will have the same treatment as fixed-wing aircraft and will be authorised by ATC to take off and land, from/to RWY 11/29. However, in order to reduce the taxiing as far as possible, GATE B shall be used to both enter and exit the apron and the following declared lift-off distances shall be defined for lift-off from the intersection with TWY Y2 for helicopter operations only.

Declared distances see item 13.

PRKG 23 and 24 are for the exclusive use of helicopters. Simultaneous entry and/or departure from both parkings or from the helicopter hangars based at the airport are not permitted.

20.6 PROCEDURE FOR OPERATION OF AIRCRAFT EXCEEDING THE CERTIFIED AERODROME CHARACTERISTICS

20.6.1 GENERAL INFORMATION

SANTANDER/Seve Ballesteros-Santander Airport permits the operation of aircraft exceeding the certified aerodrome characteristics.

Prior authorisation shall be requested by the airline or the ground handling agent. The request and corresponding response shall be made through the Airport Operations Centre (see box 2).

20.6.2 CONSIDERATIONS ON SURFACE MOVEMENT

Entries and exits to/from Apron shall only be via TWY A. Guidance via TWY T will be possible if there is any operational impact on the manoeuvring area.

Use of turning pads 11 and 29 applying a nose wheel steering angle greater than 45°.

Oversteering shall occur in the following turns: A-T1, A-T2, T1-Y1, T2-Y2, Y3-T3, Y4-T3, 11/29-Y1, 11/29-Y2, 11/29-Y3 and 11/29-Y4.

20.6.3 CONSIDERATIONS ON PARKING

Aircraft exceeding the certified aerodrome characteristics shall use PRKG 10 by default, although combined use of PRKG 12-13 may be enabled.

When PRKG 12-13 are used jointly, a reference point on the pavement shall be provided to "SÍGAME" for positioning the aircraft nose wheel.

Guidance will be provided:

- Arriving aircraft: from TWY A to the assigned PRKG.
- Departing aircraft: from PRKG to TWY A.

20.6.4 REQUEST FOR PROTECTION LEVEL 8 ON DEMAND

Seve Ballesteros-Santander Airport offers the possibility to increase the protection level to ICAO-SSEI CAT 8 for operations exceeding the certified aerodrome characteristics upon request. To operate under category 8, interested airlines shall submit a request through the Airport Operations Centre (see box 2).

The request shall be made at least 15 days prior to the scheduled flight date.

The request shall include the following details:

- Flight number.
- Type of flight.
- Aircraft model.

- Scheduled date and times.

Confirmation of category 8 will be provided through the same channel used for the request.

20.7 OPERATING PROCEDURE FOR HELICOPTERS WITH D-VALUE GREATER THAN 17.10 M

In the event that a helicopter with a D-VALUE greater than 17.10 m needs to operate at SANTANDER/Seve Ballesteros-Santander Airport, prior clearance must be requested by the airline or ground handling agent. The request and the corresponding response shall be made through the Airport Operations Centre (see item 2).

20.8 NIGHT VISUAL OPERATIONS (VFR-N)

Night visual operations are allowed.

20.9 OPERATIONAL SAFETY REPORTS

Pilots/operator shall report any accidents, incidents, occurrences or events which may have a potential operational impact and in which they have been involved or witnessed, to the airport, and as soon as possible.

The aim of these reports is the compilation of information to improve operational safety, independently of the mandatory reporting of the occurrence to the appropriate aeronautical authority.

Data may be sent in any format, including at least the following information:

- Date and time.
- Site.
- Parties involved (data used to identify vehicles, aircraft...involved).
- Companies implicated.
- Description of the facts.
- Any other data considered relevant (e.g. lighting conditions, weather, phase of the operation such as take-off / landing / stopover, pavement conditions...).

Contact e-mail address of the airport, for the reception of operational safety reports, is the following: Seguridad_operacional_SDR@aena.es

In addition to notifying the airport by means of the indicated system, it is necessary to send at least basic data of the accident, incident, occurrence or event to the air traffic control service provider (ATC).

On the specific instance of safety reports related to the air traffic control service provider (manoeuvring area, flight phases and ATS airspace), they may be sent to the e-mail address: lecm.safety@enaire.es

20.10 POINT OF ENTRY FOR PASSENGERS WITH PET ANIMALS FROM THIRD COUNTRIES

To guarantee compliance with the Regulation (EU) No 576/2013 of the European Parliament and of the Council of 12 June 2013 on the noncommercial movement of pet animals and repealing Regulation (EC) No 998/2003, any Air Carrier wishing to operate at the airport and transport the animals (pets) set out in part A of Annex I to the cited Regulation (dogs, cats and ferrets) in the cabin, as part of passenger hand baggage, must have engaged a handling agent who is to be responsible for handling the same in those cases where, during the checks undertaken by the Resguardo Fiscal of the Guardia Civil or Customs Personnel of the Passenger Terminals of SANTANDER/Seve Ballesteros-Santander airport, some breach of the health requirements established in the cited regulations is detected, prompting the animal's rejection at the point of entry.

The management for animals rejected at the border shall include, at least, transport to the facilities of the Border Inspection Service at the appropriate cargo terminal, their subsistence, veterinary care and animal welfare, and even their return to origin within the periods stipulated by the public health authorities.

LEXJ AD 2.21 NOISE ABATEMENT PROCEDURES

21.1 TRAINING FLIGHTS

Repeated approaches for training purposes are only permitted with prior authorization from the airport ATC authority and will be

restricted according to the air traffic.

21.2 ENGINE TESTS

Engine tests higher than idling shall be requested, for approval by the CEOPS office, through the FAX (+34-942 202 153) or e-mail (ceopssdr@aena.es).

Once authorized, engine tests shall be accomplished in the following areas (as appropriate):

- TWY T-1, nosing towards THR 29.
- TWY T-3, nosing towards THR 11.

LEXJ AD 2.22 FLIGHT PROCEDURES

22.1 RADAR DISPLAY SYSTEM / ATS SURVEILLANCE SYSTEMS

At SANTANDER/Seve Ballesteros-Santander airport, ATS surveillance systems may be use in the provision of aerodrome control service to carry out the following tasks:

- a. Supervision of flight paths of aircraft on final approach;
- b. Supervision of flight paths of other aircraft in the vicinity of the aerodrome;
- c. Establishment of separation between consecutive departing aircraft, in accordance with RCA 4.6.7.3; and
- d. Provision of navigation assistance to VFR flights.

Should the Solórzano radar be unavailable, all of the foregoing functions will be suspended.

Likewise, the provision of functions b) and d) is not guaranteed in the northern half of the ATZ below 1000 ft AMSL nor in the southern half of the ATZ below 2000 ft AMSL.

In addition, the ATS Surveillance Systems may be used to provide the following to the controller by procedures:

- a. Better position information on controlled aircraft.
- b. Supplementary information on other transit.
- c. Information about any significant deviation of aircraft from what the corresponding air traffic control clearances may establish, including cleared routes and flight levels where applicable.

22.2 LOW VISIBILITY PROCEDURES (LVP)

Low Visibility Procedures (LVP) are not available at SANTANDER/Seve Ballesteros-Santander airport.

22.3 OPERATIONAL STANDSTILL PROCEDURE IN THE MOVEMENT AREA (PPOAM)

Low Visibility Procedures (LVP) are not available at Santander/Seve Ballesteros-Santander Airport for ground movements. The MOVEMENT AREA OPERATIONAL STANDSTILL PROCEDURE WHEN RVR IS LOWER THAN 550 M (PPOAM 550) is available instead to maintain safety in the movement area. This procedure shall be applied when the weather conditions are as follows:

- $550 \leq \text{RVR} < 800$: taxiing of only one aircraft, at a time, in the movement area shall be authorized.
- $\text{RVR} < 550$: Operations in the movement area shall come to a standstill.

Information for pilots

Uncertainty regarding the position in the manoeuvring area

When in doubt about the position of the aircraft relative to the manoeuvring area:

- If it is known that the aircraft is not on RWY, immediately stop the aircraft and report this event (including the last known position) to ATC.
- If it is known that the aircraft is on a RWY, immediately report (including the last known position) to ATC, evacuating the RWY, as soon as possible if a proper nearby TWY can be located, unless ATC indicates otherwise; and then stop the aircraft.

Failure of an aircraft

- Report the situation to ATC and await the arrival of assistance. In the case that the aircraft is on a RWY, if possible and unless ATC indicates otherwise, the pilot will evacuate the RWY.

Loss of visual contact between traffics

- In the case of the loss of visual contact with another aircraft or a vehicle with which separation is maintained, ATC will be informed immediately and the aircraft will stop.


Communications failure

- Departing aircraft: aircraft shall continue by the assigned route and stop at the limit of the ATC clearance, taking extreme caution. Here they will maintain their position and wait for the arrival of an assistance vehicle.
- Arriving aircraft: if the aircraft has just landed, it shall maintain its position when leaving the RWY and wait for the arrival of an assistance vehicle.
- If the aircraft already has taxiing with ATC clearance, it shall continue by the assigned route to the limit of such authorisation, taking extreme caution. Here, it will maintain its position and wait for the arrival of an assistance vehicle.

22.4 CONTINUOUS DESCENT OPERATIONS

Depending on traffic situation, and if no need for interrupting the descent is foreseen, aircraft will be cleared to proceed to a standard arrival (STAR), or by means of a "direct to" clearance to an intermediate fix of the STAR, to the IAF, to an intermediate approach fix or to the IF, to an appropriate altitude of the instrumental procedure (IAC), so that the descent operation may be accomplished continuously.

22.5 AD TRAFFIC CIRCUIT

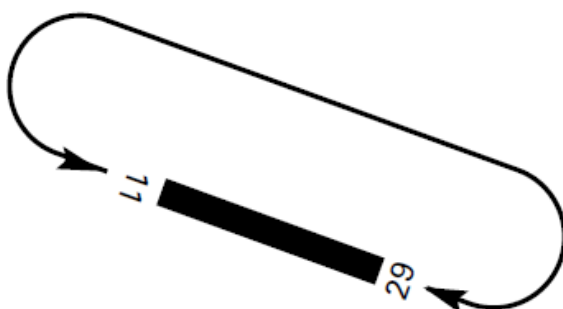

LEXJ AD 2.23 ADDITIONAL INFORMATION

Caution due to bird concentration on RWY 11/29 and in the vicinity of the aerodrome.

Notification to aircraft equipped with TCAS, version prior to number 7, operating at Santander/Seve Ballesteros-Santander airport or in the vicinity:

- For continuous performance verification of the en-route radar located at in Solórzano (Cantabria), a fixed radar transponder has been installed in the airport TWR with the following characteristics:
 - Location: 432521.6519N 0034919.6526W (3.87 DME SNR, 0.28 NM South of ARP).
 - Alpha Mode code: 7777
 - Antenna altitude: 123.70 ft.

Aircraft equipped with TCAS, version prior to number 7, during approach or overflying at low altitude close to these coordinates, may receive TCAS traffic advisories corresponding to this fixed transponder. These indications do not identify real traffic and should be

ignored.

23.1 WIND PHENOMENA

The orographic conditions of Cantabria and the location of Santander/Seve Ballesteros-Santander airport contribute, under certain conditions, to the appearance of wind shear and turbulence phenomena in THR 29 approach. At this location, an S-SW wind creates severe turbulence that can be noticed in an area up to 10 NM, from the ground up to 1800 ft estimated altitude. These phenomena occur when the wind measured at THR 29 varies between 190° and 220°, with intensity equal to or greater than 20 kt, accompanied by frequent gusts above 30 kt.

In these situations, the THR 29 approach is not recommended.

23.2 BIRD CONCENTRATION AREAS AND MOVEMENTS OF BIRDS

Between approximately 15 June and 15 September (with greatest likelihood during the months of July and August), after days of rain, with stable environmental conditions, high humidity and temperature, and in the absence of rain and wind; there may be occasional concentrations of gulls (principally of yellow-legged gulls, *Larus michahellis*), due to the massive presence of flying ants over the runway and over unpaved areas.

BIRD CONCENTRATION AREAS – ATTRACTION POINTS

AREA 1: Laguna de Parayas (inside the aerodrome).

AREA 2: Marismas de Alday.

AREA 3: Agro-food material warehouses at Raos industrial estate.


AREA 4: Ensenada de San Bartolomé.

BIRD MOVEMENTS

MOVEMENT A: Movements of mute swan and mallard (generally parallel to the runway and between AREAS 1, 2 and 4).

MOVEMENT B: Movements of yellow-legged gull (outside threshold 11 and threshold 29).

MOVEMENT C: Movements of rock dove (outside threshold 11).

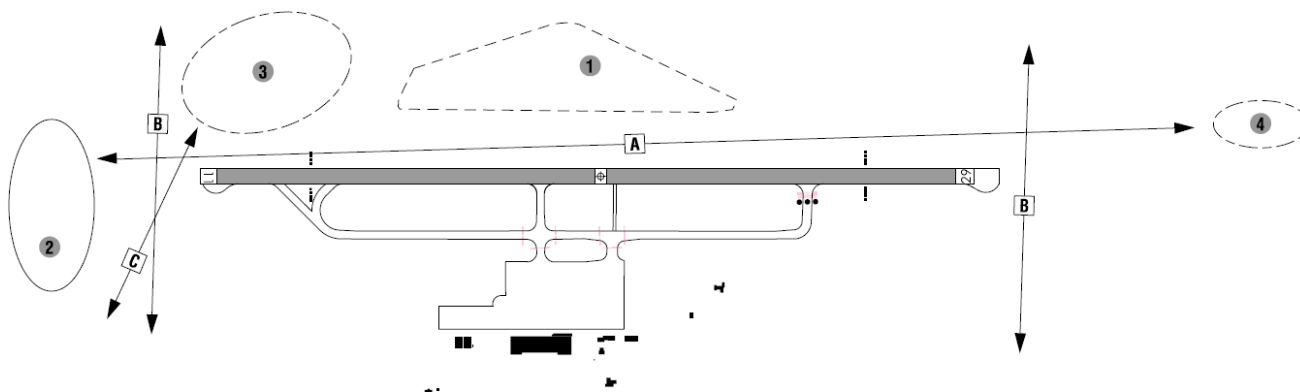

23.3 PRESENCE OF SMOKE

Occasional presence of thick smoke at 1.2 NM from THR 29 in the vicinity of coordinates 432447.8N 0034631.5W.

LEXJ AD 2.24 AERONAUTICAL CHARTS RELATED TO AN AERODROME

The list of charts related to the aerodrome can be found on the link below:

<https://aip.enaire.es/AIP/#LEXJ>

LEXJ AD 2.25 VISUAL SEGMENT SURFACE (VSS) PENETRATION

The instrument approach procedures affected can be found below:

- IAC 1 RNP Z RWY 11 (LPV ONLY): LPV.
- IAC 2 RNP Y RWY 11: LNAV, LNAV/VNAV.
- IAC 3 VOR RWY 11: Direct approach.
- IAC 4 NDB RWY 11: Direct approach.
- IAC 6 RNP Y RWY 29: LNAV, LNAV/VNAV.
- IAC 10 VOR RWY 29: Direct approach.